



# Uponor

RADIANT, PLUMBING AND  
FIRE SAFETY SYSTEMS

**PUNCH&PULL™**

**INSTRUCTION SHEET**

## Punch & Pull™

With Uponor's sustainable Punch&Pull™ packaging, installers can use an Uponor Uncoiler or simply punch through the plastic perforation in the center of the coil and pull the required amount

of tubing for installation in radiant, plumbing or fire safety applications. When done, simply push the unused tubing back into the packaging and carry it to the next project.

**Note:** It is not necessary to remove the outer packaging from the coil.

### Instructions for Shorter Lengths (typically plumbing installations)



1. Punch through the plastic perforation in the center of the coil.



2. Find the end of the tubing in the center of the coil and pull it out.



3. Place coil on the floor. Pull the necessary amount of tubing for the installation and cut as needed.



4. When done, push the unused tubing back into the packaging and carry the coil to the next project.

## Instructions for Longer Loop Lengths without Uncoiler (typically radiant installations)




1. Punch through the plastic perforation in the center of the coil and remove the outer clear plastic layer.



2. Stand coil up on end and, using an Uponor-approved safety cutter, make a small cut along the outside circumference of the coil.



 Uponor-approved, concealed-blade safety cutters (which cut shrink wrap, not the tubing) are available at most home-improvement retailers. Some brands include Performax™, Klever Kutter™ or Olfa®.



3. Pull plastic away from the tube and cut it perpendicular to the coil.



4. Remove the packaging while applying pressure to the tubing to keep it from uncoiling.



5. Remove needed length of tubing from inside or outside of the coil.

## Instructions for Longer Loop Lengths with Uncoiler (typically radiant installations)



1. Punch through the plastic perforation in the center of the coil.



2. Using an Uponor-approved safety cutter (see **page 2**), remove the outer clear plastic layer. **Note:** Do not remove the inner white plastic layer.



3. Place the coil on the Uponor Uncoiler.



4. Find the end of the tubing in the center of the coil.



5. Feed the end of the tubing through the eye of the uncoiler and remove needed tubing for installation.



6. Once you reach the end of the coil, cut the stretch film.



7. Remove the stretch film by separating layers binding to the tubing.



**(Optional)** When done, if there is still stretch film on the coil, push the unused tubing back into the packaging, and carry the coil to the next project.

**Uponor, Inc.**  
5925 148th Street West  
Apple Valley, MN 55124 USA  
Tel: 800.321.4739  
Fax: 952.891.2008

**Uponor Ltd.**  
2000 Argenta Rd., Plaza 1, Ste. 200  
Mississauga, ON L5N 1W1 CANADA  
Tel: 888.994.7726  
Fax: 800.638.9517

**Uponor**

[www.uponorpro.com](http://www.uponorpro.com)