



Installation A/C Line Set (Post WRB)

IMPORTANT:

Always refer to house wrap or building paper manufacturers install guidelines.

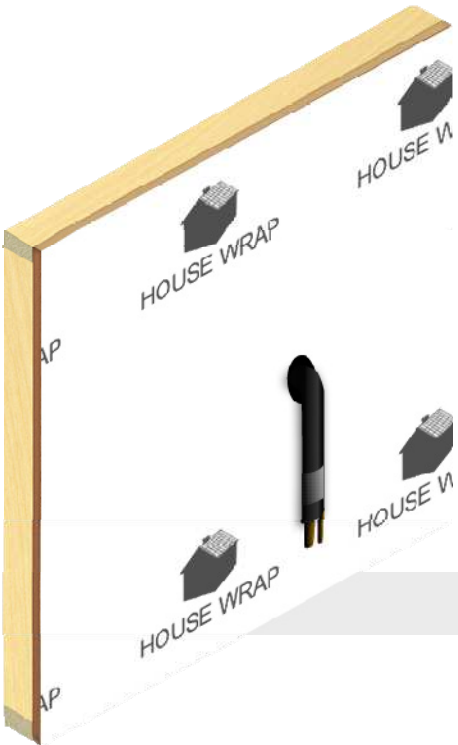


1

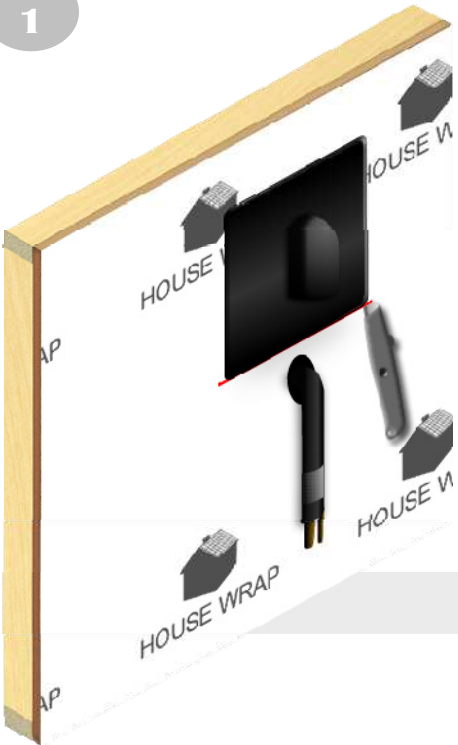


Using the Quickflash® panel as a guide, mark the length of the panel plus 1/4" on each side 2" above penetration onto the WRB and using a utility knife, cut a slit along the mark.

2

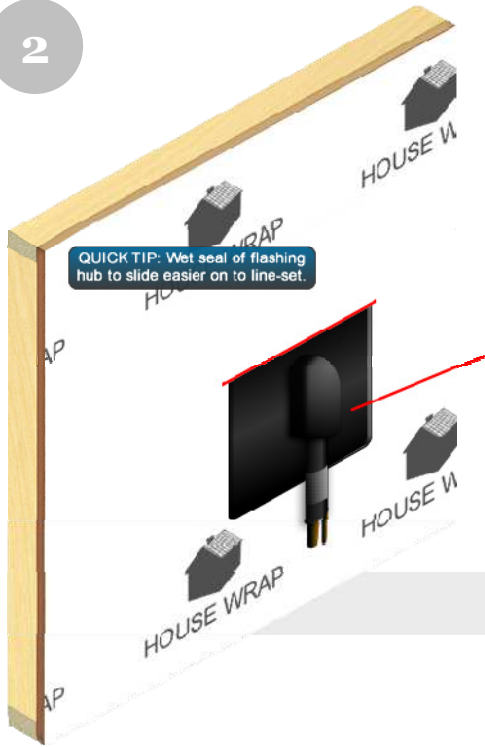


Slide the Quickflash® panel up underneath the WRB and over the penetration pressing down firmly to ensure a flush seal.

3

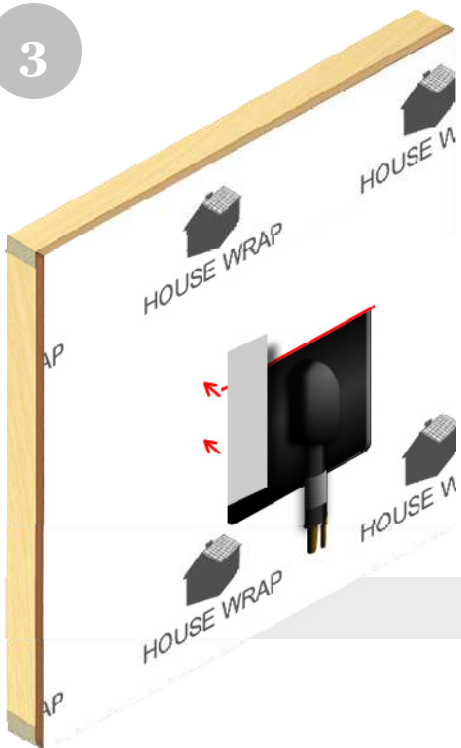


Tape on left side.

4

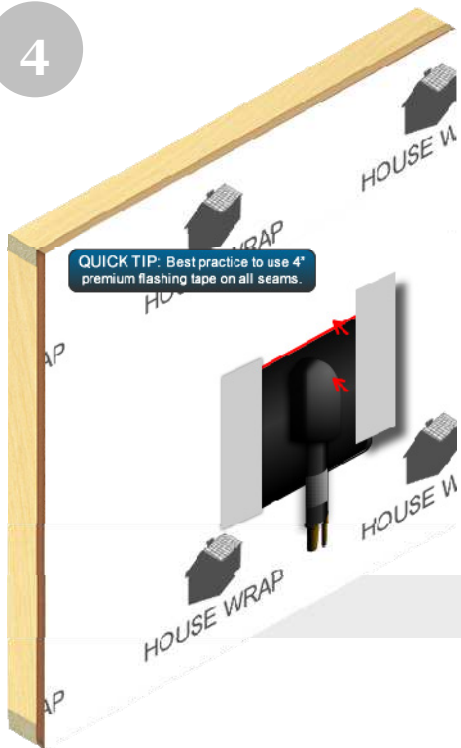


Tape on right side.

5

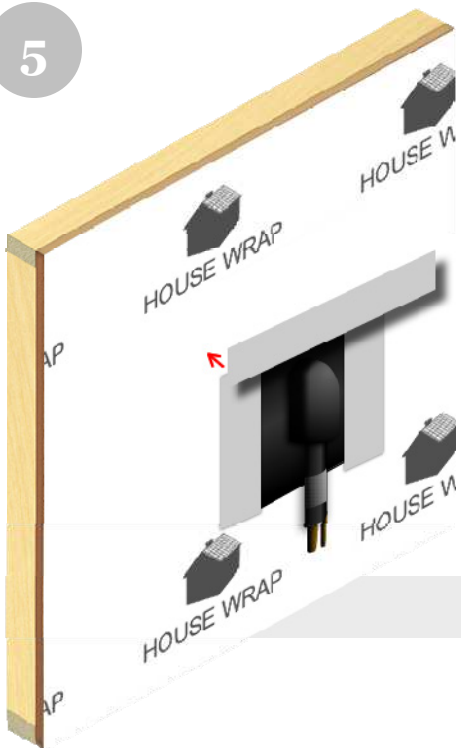

Tape across the top.

6

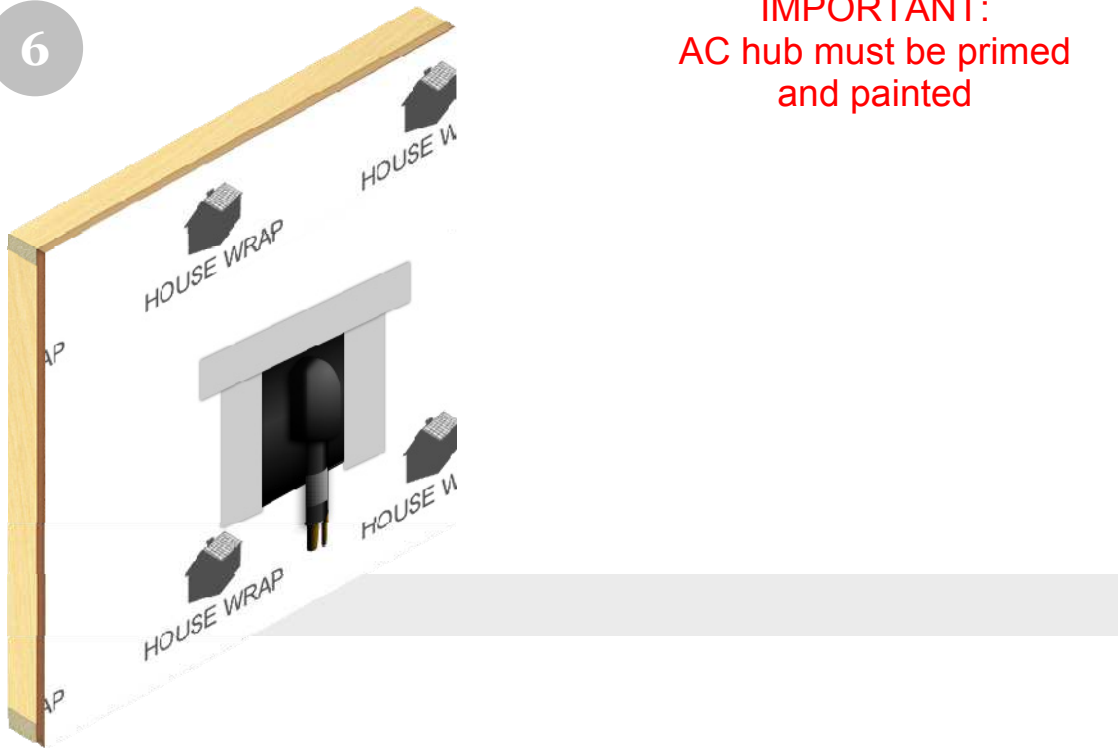

IMPORTANT:
AC hub must be primed
and painted