

Installation A/C Line Set (Pre WRB)


IMPORTANT:

Always refer to house wrap or building paper manufacturers install guidelines.



1

Slide Quickflash® panel onto line-set firmly pressing panel against the wall or studs.

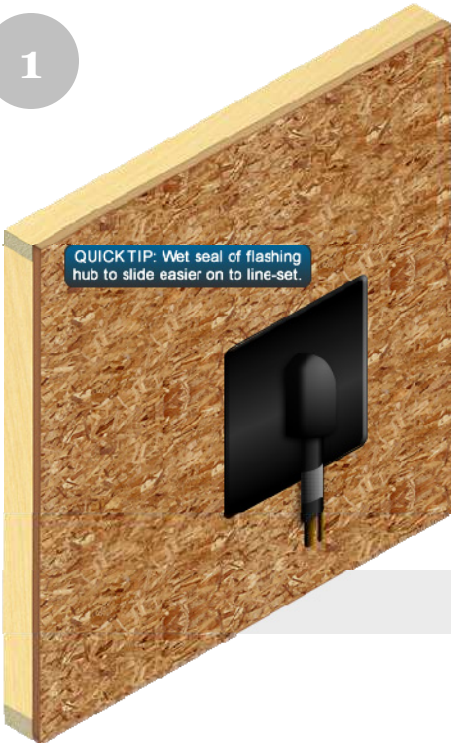

QUICKTIP: Wet seal of flashing hub to slide easier on to line-set.

2




Using non-corrosive fasteners, secure the Quickflash® panel to the structure from the mid-point of the panel to the top.

3



Slide the weather resistant barrier underneath the Quickflash® panel to the bottom of the line-set.

4

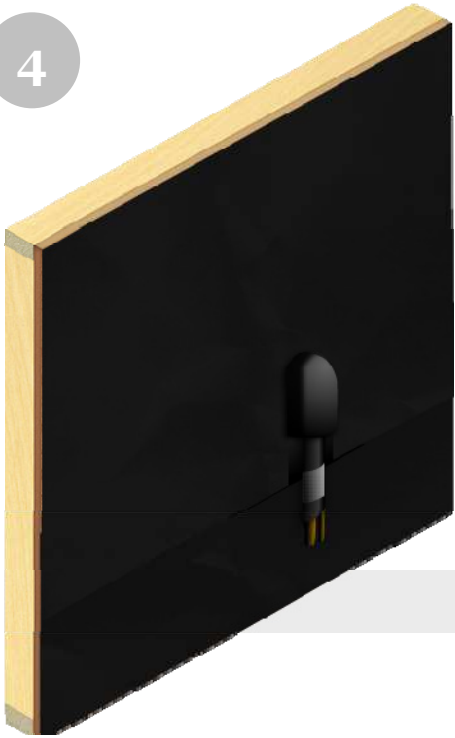

Install the weather resistant barrier carefully cutting an opening around the protruding line-set, over the top of Quickflash® panel using shingle style method extending to the bottom of the panel or further down.